

Latitude Tour - part number	Tire Size, Load Index &Speed Rating	Mileage Warranty	Sidewall	UTQG Tread, UTQG Traction, UTQG Temp	Rim Width Range (Min/Max)	Section Width on Measuring Rim Width	Overall Diameter	revs/mi	Tread Depth (in 32nds)	Max Load, Single (lb @ PSI)	Tire Weight
34657	P225/65R17 100T	65,000 Mile	BSW	720/A/B	6" - 8"	9" on 6.5"	28.5"	730	10.0	1604@44	25.71 lbs
21780	P235/55R18 99T	65,000 Mile	BSW	620/A/B	6.5" - 8.5"	9.7" on 7.5"	28.2"	739	10.0	1554@44	27.2 lbs
21436	235/65R18 106T	65,000 Mile	BSW	620/A/B	6.5" - 8.5"	9.5" on 7"	30.0"	692	10.0	1900@44	30.84 lbs
35664	245/60R18 105T	65,000 Mile	BSW	600/A/B	7" - 8.5"	9.8" on 7"	29.6"	703	10.0	1804@51	31.97 lbs
03835	P255/60R19 108S	65,000 Mile	BSW	600/A/B	7" - 9"	10.2" on 7.5"	31.1"	670	10.5	2004@44	34.28 lbs
87355	P265/60R18 109T	65,000 Mile	BSW	720/A/B	7.5" - 9.5"	10.7" on 8"	30.5"	682	10.0	2064@44	35.93 lbs